

Marimba One IzzyTM

OWNER'S MANUAL

combination wood and aluminum rails

www.marimbaone.com tel 707 822 9570 fax 707 822 6256


> 901 O St, Suite D Arcata, CA 95521 USA

marimba one®

ASSEMBLY INSTRUCTIONS & OWNER'S MANUAL


FOR ASSEMBLY, YOU WILL NEED:

- A large open space with carpet (or a blanket to cover the floor)
- An assistant to help assemble the heavy items

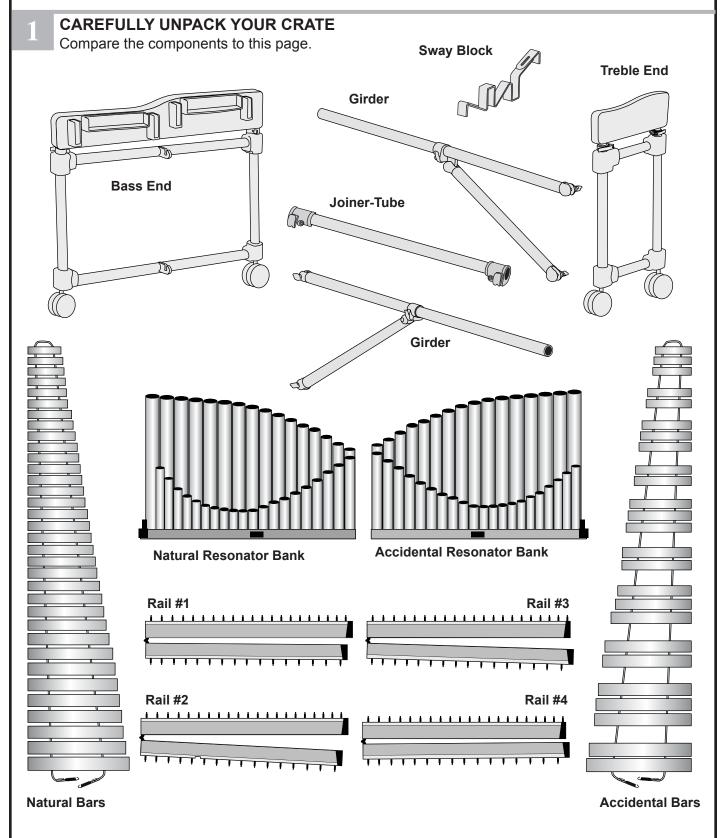

ARRANGE FRAME COMPONENTS


In a large open space with carpeting (or a blanket), arrange the frame components.

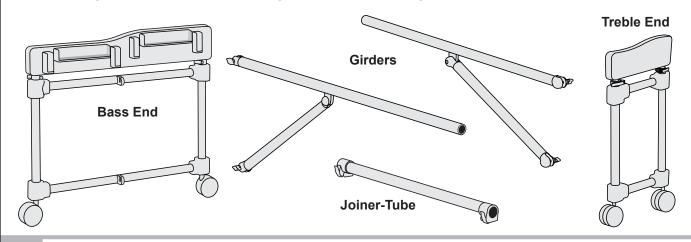


3 SEAT GIRDER ENDS ONTO HOOKS

Have your assistant hold the bass end-frame upright while you hold the girder.


You may need to fully loosen the girder knobs.

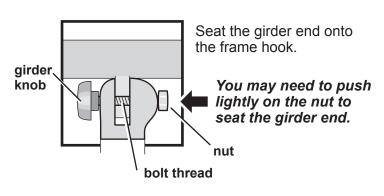


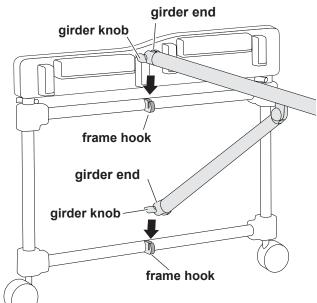

4 SECURE GIRDERS TO HOOKS

Completely tighten the knob.

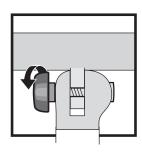

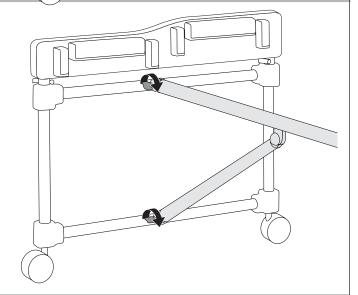

5 REPEAT STEPS FOR TREBLE END OF FRAME

051214 - REV. A PAGE 2 0F 11


6 LOOSEN JOINER-TUBE LEVERS

Flip levers to the open position.




7 CONNECT GIRDERS

Slide the joiner-tube over the girder tubes until the joiner-tube can go no further.

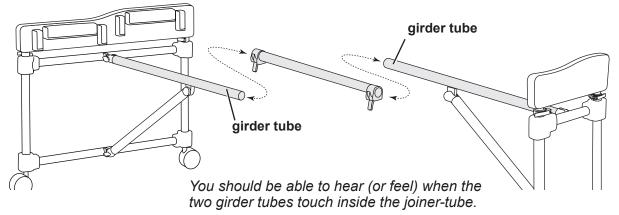


SECURE GIRDERS

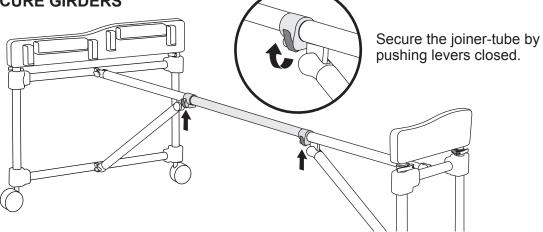

9 IDENTIFY RAIL #2


The rails are numbered on the hinge end. When the rails are folded, the number appears in the end-grain of the wood.

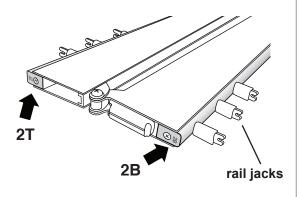

10 UNFOLD RAIL

With your assistant, unfold the rail while supporting each end.

NOTE: Gaps between the rail jacks are larger on the bass end of rail.

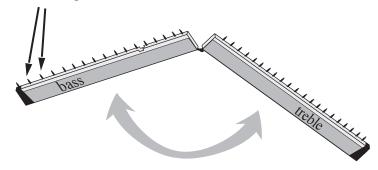

051214 - REV. A PAGE 3 0F 11

11


INSTALL RAIL #2

Position yourself with the bass end on your left and treble end on your right.

Note that the bass end of the rail has larger gaps between the jacks than the treble end of the rail.

Lower rail #2 into the slots on the frames.

Make sure the rail is fully engaged onto the flexible pins inside the slots.

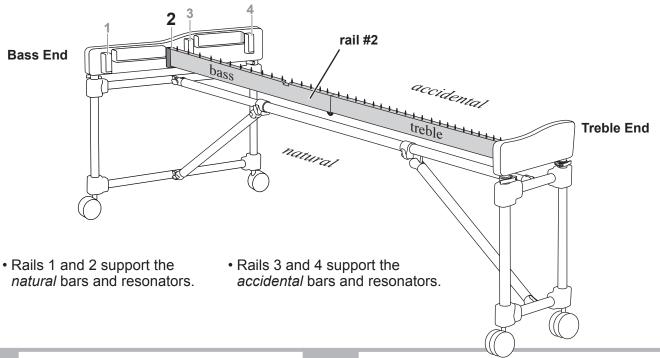

12 IDENTIFY NATURAL RESONATOR BANK


CAUTION:

The resonators are heavy. You will need an assistant to help move the resonators into place.

The **natural** resonator bank has a plug inside every tube.


The accidental resonators are missing a plug inside every 3rd or 4th tube.


13 UNFOLD RESONATOR

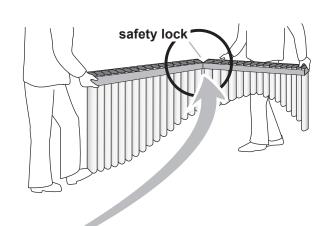


14 CLOSE SAFETY LOCK

   Lock is located at hinge point on resonator bank.








051214 - REV. A PAGE 4 0F 11

INSTALL NATURAL RESONATOR BANK

With your assistant, carefully lift the natural resonator bank upright.

With each person holding the ends of the resonator bank, lower the bank into the frame, in front of the girders.

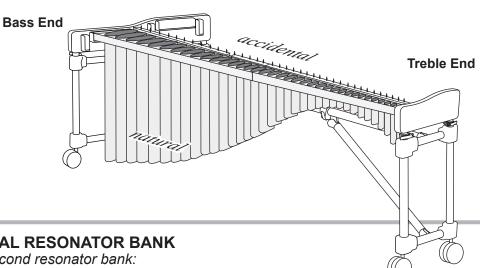

16

INSTALL ACCIDENTAL RESONATOR BANK Repeat steps for the second resonator bank:


• Each person holds the ends of the resonator bank.Lower the bank onto the frame BEHIND the girders.

INSTALL RAILS #1 AND #4

Lower rail #1 and #4 into the slots on frame.


Make sure the rails are fully engaged onto the flexible pins inside the slots.

NOTE: Bass end of the rail has larger gaps between the jacks than the treble end of the rail.

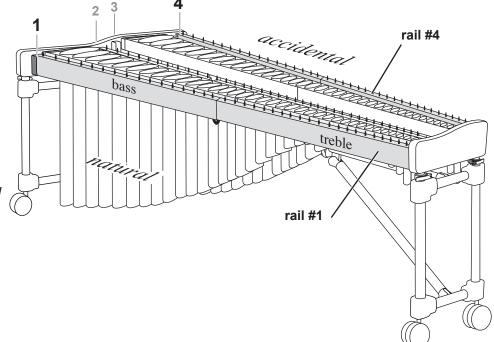


INSTALL SWAY BLOCK

Slide ends of sway block into brackets on resonator banks and over the notch on rail #2.

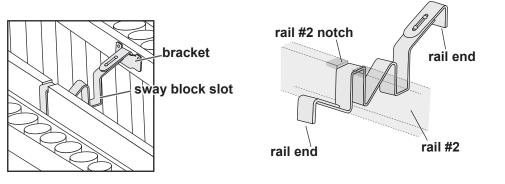


051214 - REV. A PAGE 5 0F 11

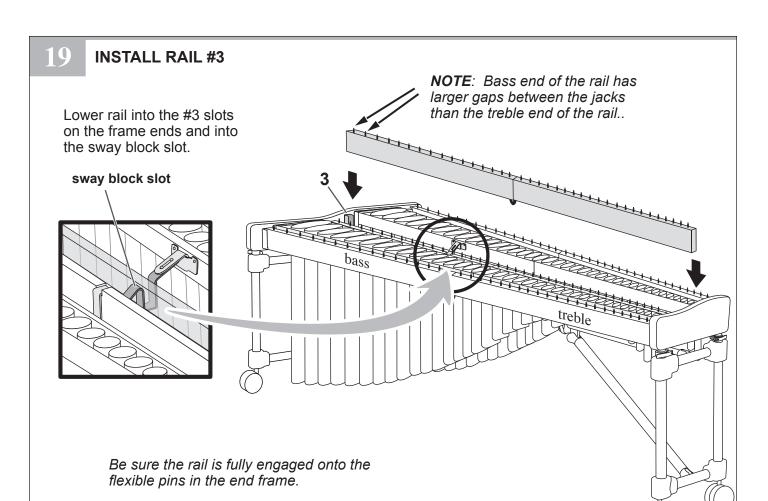

INSTALL NATURAL BARS

Carefully unroll heaviest bar bundle.


With your assistant at one end and you at the other, lift the natural bars and lay them over rails #1 and #2.

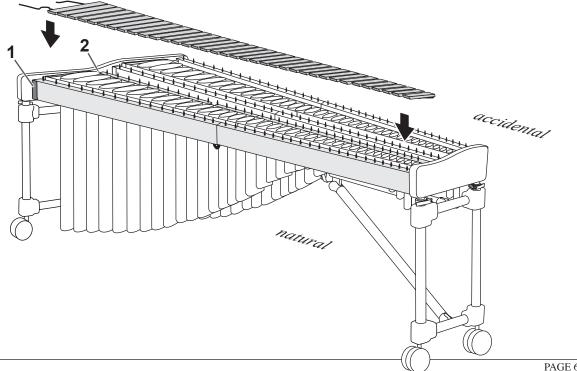

21 POSITION BARS ON RAILS

Move each bar into its correct position, making sure that the cord rests in the Jacks between each bar.


Wrap the bar cord around the Corner jacks at the treble end.

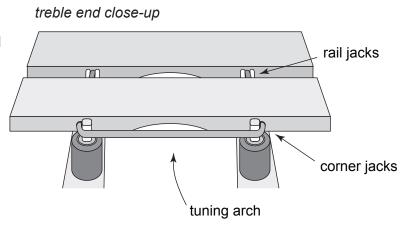

22 SECURE BARS TO RAIL

Once all the bars are in place, from the bass end pull the cord taught (pulling evenly on each end of the cord at the same time), loop the cord around the corner jacks and hook the springs together.

bass end close-up

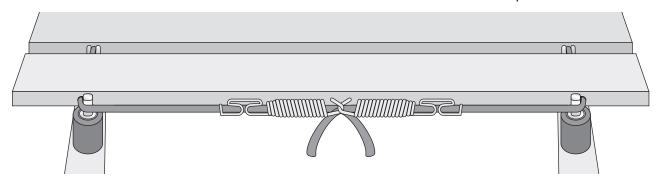

FOLLOW SAME PROCEDURE FOR ACCIDENTAL BARS

The bars go over every resonator that is plugged.

 
When you look from the top you can see the floor through the resonators without bars over them.

051214 - REV. A PAGE 7 0F 11

bar cord tension


Over time, as you play your instrument, the cord that suspends the bars may loosen and need to be adjusted. To increase tension in the bar cord, use the cleats behind the springs to hold the slack in the cord.

UNHOOK SPRINGS




FORM LOOP IN CORD

At cleat, pull cord to make enough slack to form a loop.

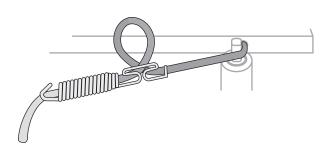


2 SLIP LOOP OVER CLEAT

Slip the loop down around the cleat. Pull the cord taught.

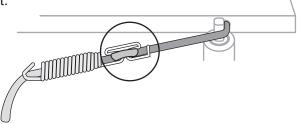

4 RE-HOOK SPRINGS

 


NOTE: In time, the cord may become loose again. Do not exceed a maximum of THREE loops around each cleat.

051214 - REV. A PAGE 8 0F 11

height adjustment


CAUTIONS!

To prevent damage, always adjust the height of the marimba with <u>all rails, resonators and bars</u> INSTALLED.

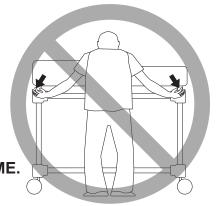


DO NOT RELEASE LEVERS AT THE SAME TIME.

1

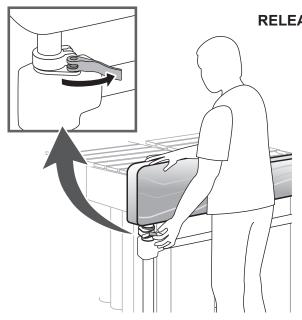


RELEASE LEVERS ONE AT A TIME.

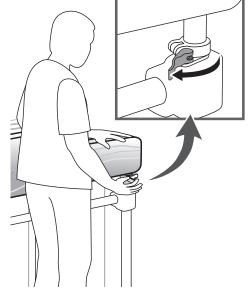


2

Locate the height gauges on the inside edges of frame.

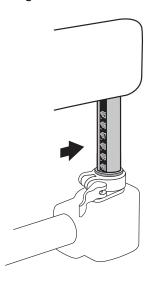


3

Raise or lower the end frame.

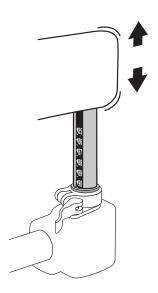


4


Use guages to ensure that both ends are always at the same height.

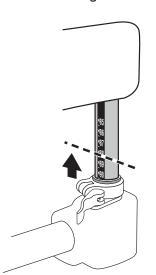

5

Close levers when desired height is achieved.

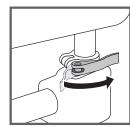

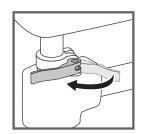

ALWAYS KEEP MARIMBA ENDS AT EQUAL HEIGHTS.

051214 - REV. A PAGE 9 0F 11

height adjustment warnings

- Always adjust the height of the marimba with rails, resonators and bars installed.
- · Release the levers one end at a time.
- Always keep marimba ends at equal heights.
- Do not release the end levers at the same time.

marimba cleaning

USE A SOFT COTTON RAG OR TOWEL DAMPENED WITH WATER ONLY.

DO NOT USE FURNITURE POLISH on your marimba!

Most of this type of product contains silicone, which will damage the finish and contaminate the wood.

moving the marimba

THE MARIMBA SHOULD ONLY BE LIFTED BY THE END FRAMES.


- Lifting by the rails will cause the rails to come out of their slots.
- When the marimba is moved, pass VERY SLOWLY through doorways, over doorjambs, electrical cords, and uneven surfaces.

sagging bars

With time, the natural or accidental bars may sag over the length of the marimba.


CAREFULLY REMOVE THE BARS THAT ARE SAGGING.

- Lift out the rail that is no longer level and fold the rail to expose the stainless steel leveling screws.
- Turn ONE of the screws about an eighth of a turn from its present location.

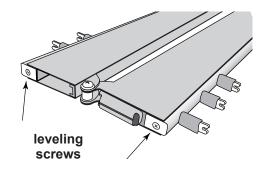

Replace the rail and check it again. Reposition the bars as before.

051214 - REV. A PAGE 10 0F 11

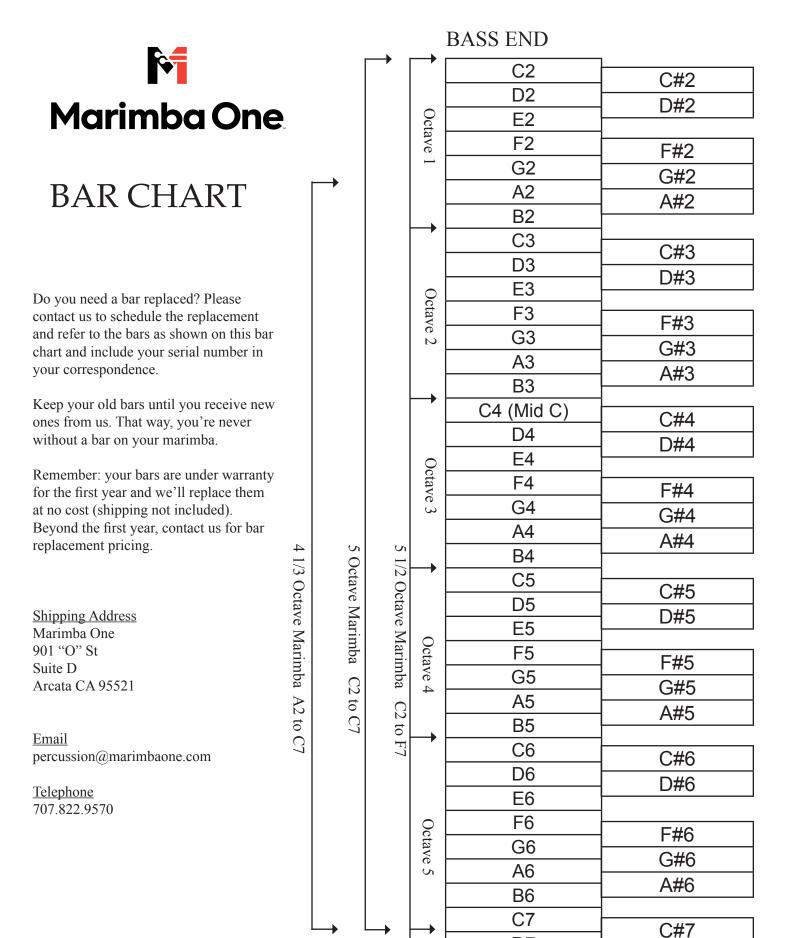

D7

E7 F7

TREBLE END

D#7